

Thank you for choosing a high-quality DAYTONA VELONA-W display instrument. With proper installation and connection, you will have long-lasting pleasure with this high-quality product when used as intended.

When installing, please make sure that the speed indicator is located in the immediate view of the driver. Attach the housing securely to the enclosed V-Bracket or mount with an at least equivalent holder permanently to the bike. Do not use longer screws to connect the holder to the housing, as longer screws can damage the instrument's internal components. Attach the instrument in a way that no part obstructs or restricts the steering. Route the wiring in such a way, that the full steering angle works in both directions without hindrance and no cables are pinched or under tension when the steering moves. Protect the cabling, also in the long term, against chafing and damage during the constantly occurring steering movements.

Read this assembly and installation manual before installing and operating the display instrument. Proper installation and electric connection requires technical expertise, special tools and skilled craftsmanship. If you are unsure about the installation, have it done, for your own safety, by a trained mechanic.


**CAUTION**

- Read all instructions before use.
- Needs to purchase the optional speed sensor if the vehicle does NOT come with an electrical speed sensor. Or use a converter (sold separately) that turns mechanical movement into electrical pulse, if the vehicle comes with a mechanical speedometer cable. (See the optional parts section in this manual.)
- Designed for a 12V system vehicle. VELONA gauges do NOT work with a 6V system or a battery-less system.
- VELONA gauges might not work normally when used together with other device that emits much noise.
- Use VELONA gauges for the intended purpose of use.
- VELONA gauges is for universal use, so it needs wiring for installation. Do the wiring referring to the vehicle owner's manual. (If you are not sure about installation, consult an experienced dealer.)
- Do NOT disassemble VELONA gauges. It may be damaged and water may come in.
- Do NOT leave VELONA gauges in high heat when not used for a long time.
- Do NOT hit, drop or give a shock on VELONA gauges. It may be damaged.
- Avoid contact with gasoline, brake fluid or other chemicals. It may be damaged.
- After installation, check to see if all the parts are correctly installed, and to see if all the screws are properly tightened.
- Inspect all installed parts after 100km driving. Periodical inspection is required every 500km(300mile). If anything unusual found while driving, pull over at a safe place to check.

**PRODUCT FEATURES**

- Stepping motor-driven speedometer and rpm-meter
- Stainless steel + black painted
- KM/H or MPH selectable
- Odometer (NOT Resettable) : 0.0-99,999.9km (mile)
- Dual Trip Meter (Resettable) : 0.0-99,999.9km (mile)
- RPM Meter : 0-9,000rpm
- Ability to connect to OEM speed sensor, if the vehicle is equipped with an electrical speed sensor.
- Voltmeter : DC10.0-16.0V
- Maximum speed memory and recall
- Maximum rpm memory and recall
- Indicators (turn signal[L/R], high beam, neutral, warning)
- Power DC10-16V (regular 12V)


**COMPONENTS**

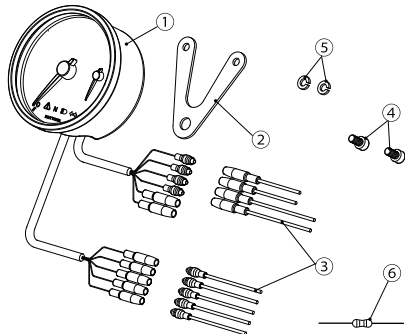

NO.	DESCRIPTION	REMARKS	Q'TY
①	Gauge Unit		1
②	V-Bracket		1
③	Extension Wire Set	9 pcs	1set
④	Cap Screw	M5x10	2
⑤	Spring Washer	M5	2
⑥	Register 1M ohm	1/4W	1

**INSTALLATION**


- ⚠ Wrong wiring may cause malfunction of the gauge. Make sure to have correct wiring.
- ⚠ Disconnect the ground wire from the negative post of vehicle's battery before installation.
- ⚠ The Red wire is to be connected to the wire that gives current when the main switch is turned on.
- ⚠ Connect RPM pulse correctly. Wrong wiring causes malfunction of the gauge. If the RPM is unstable, insert the included "6 Resistance 1M ohm" into the RPM Pulse line.

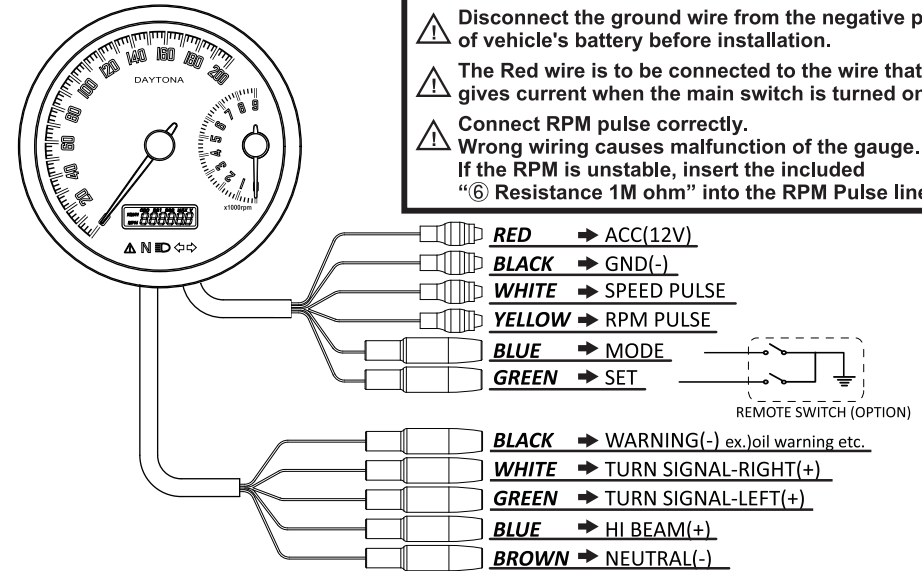

**RPM pulse detection <Three options>**



<p><b>From ignition coil</b></p> <p>Connect the yellow wire to the positive terminal/wire of the ignition coil</p>	<p><b>From spark plug code</b></p> <p>Wind the yellow wire 5-6 times on the spark plug code, and then tape to fix it.</p>	<p><b>For 2000&amp;up Harley-Davidson only</b></p> <p>Connect the yellow wire to the red wire of the vehicle's crank position sensor</p>
--	---	--

**Indicator connected**



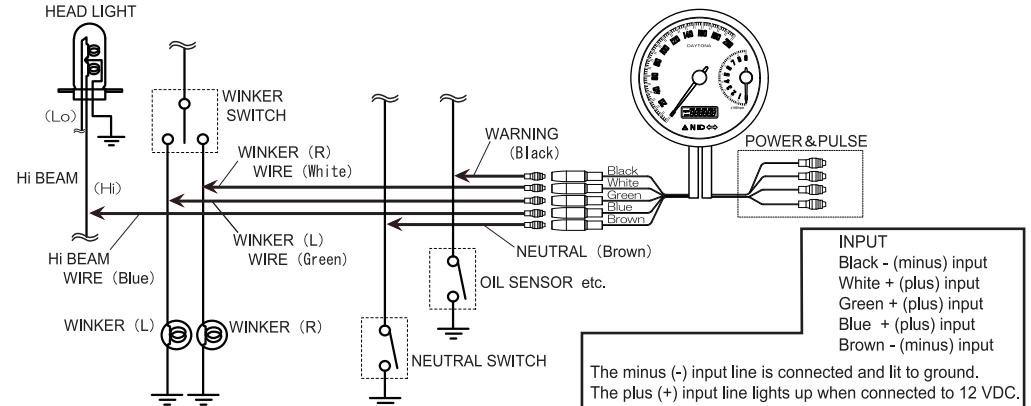


# BUTTON OPERATION AND SETUP

⚠ Read all instructions before setting.  
Especially for "speed calibration", initially decide which way you will do from 3 types.

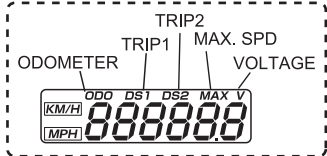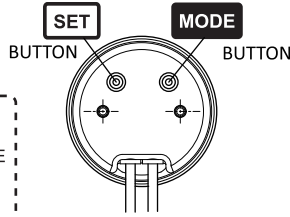

- ⚠ WARNING
- N NEUTRAL
- HI BEAM
- TURN SIGNAL-LEFT
- TURN SIGNAL-RIGHT

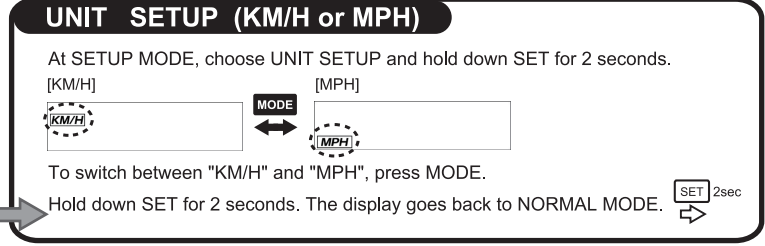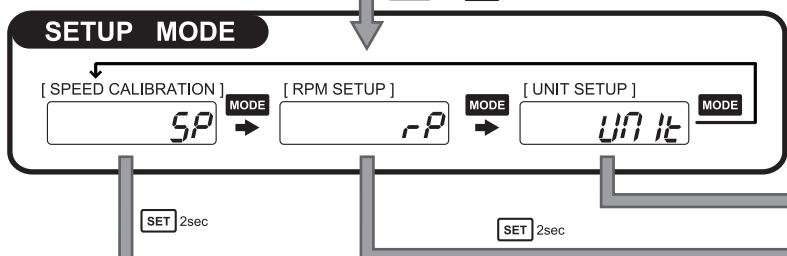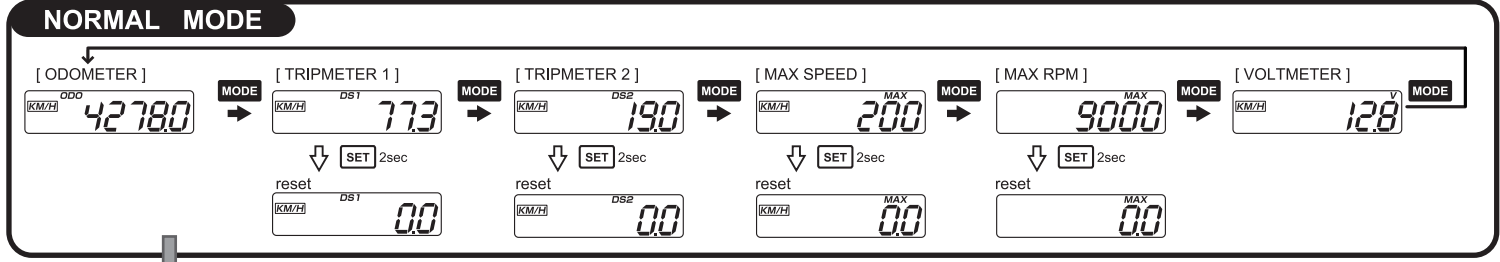

### SPEED CALIBRATION

At SETUP MODE, choose SPEED CALIBRATION and hold down SET for 2 seconds. You can choose one way from 3 types of calibration.

#### AUTO CALIBRATION MODE

When ready to drive, hold down SET for 2 seconds.

Press MODE.

Drive exactly one(1) kilometer/mile. (When driving, the display counts number of pulse obtained from sensor.)

After driving one(1) kilometer/mile, stop the vehicle and press MODE to finish the setting.

Hold down SET for 2 seconds. The display goes back to NORMAL MODE.

#### SPEED ADJUST MODE

When ready to drive, hold down SET for 2 seconds.

Start driving following another vehicle running at constant speed of 40km/h(MPH).

Press MODE in driving at actual speed 40km/h(MPH) to finish the setting.

The display will start indicating the current speed after a while and automatically goes back to NORMAL MODE.

#### MANUAL MODE

Calculate the value of "pulse per km" by A + B

**A pulses per revolution**  
Enter the AUTO CALIBRATION MODE, turn the wheel exactly 10 revolutions. The display shows the pulses per 10 revolutions. Divide this value by 10.

**B tyre circumference (km)**  
Measure your tyre circumference in "cm" and divide by 100,000 to be "km".

**A ÷ B = pulses per km**

Then enter MANUAL MODE and input this value as follows.

Hold down SET for 2 seconds.

### RPM SETUP

At SETUP MODE, choose RPM SETUP and hold down SET for 2 seconds.

#### PPR (Pulse Per Rotation) SETUP

To switch between engine types, press MODE.

Select PPR from the following.

- 1P-1r : 1pulse per 1revolution
- 1P-2r : 1pulse per 2revolutions
- 2P-1r : 2pulses per 1revolution
- 30P1r : For 2000up Harley-Davidson only.

Hold down SET for 2 seconds at the intended type to set. The display goes back to NORMAL MODE.

### OPTIONAL PARTS

TWIN SIGNAL SPEED PULSE CONVERTER <#87430>

PROXIMITY SPEED SENSOR <#87038>

RPM INDUCTION WIRE SET <#87170>

SPEED PULSE CONVERTER  
DIA10 INSERT <#87755>  
DIA15 INSERT <#87143>  
DIA18 PLUG CONNECTION <#87041>  
M12 THREAD FEMALE <#87429>  
FOR BMW BOXER MODEL <#88457>

RPM PULSE RECTIFIER <#92333>

REMOTE SWITCH  
<#87047(black)>  
<#87082(chrome)>